

How To Order Safety Mats

Step-by-step guide to the ordering process



CONTROLMAT and ARMORMAT SAFETY MATS

1. Specify the mat size.

Single ControlMat Safety Mats are available in sizes up to 48" x 192".
 Single ArmorMat Safety Mats are available in sizes up to 48" x 120".
 Larger multi-mat configurations are also available.

2. Pick a lead exit.

Mats are supplied with one 4-conductor cable.
 The lead outlet options are:

- LLS** Long side, Left end, Single lead
 - LRS** Long side, Right end, Single lead
 - SLS** Short side, Left end, Single lead
 - SRS** Short side, Right end, Single lead
- Special lead exits are also available.

3. Pick a mat color.

Color choices are: Black, Yellow, and Blue.

4. Pick an edge treatment.

Choices are ramped (standard) or square.



5. Pick aluminum edging (trim), if required.

For ramped mats, use [AE-1](#).

For square-edge mats, use [AE-2](#), [AE-3](#), or [AE-13](#).

6. Pick a fail-safe interface controller, if required.

Choose a [PRSU](#) or [PSSU](#) model for high-risk applications.

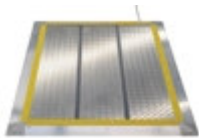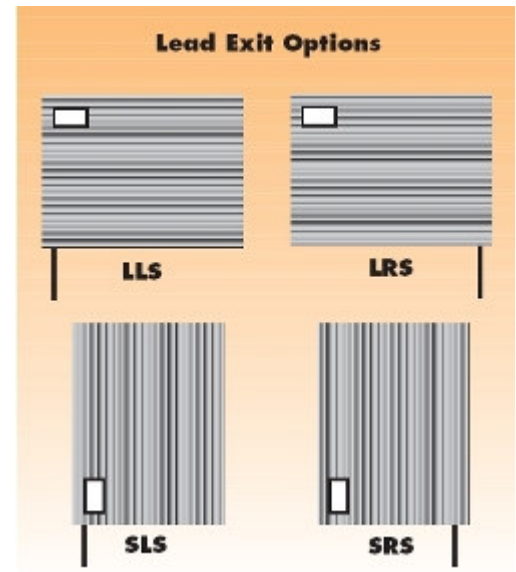

DIAMOND PLATE SAFETY MATS

1. Specify the active area required.

Diamond Plate Safety Mats have 3.5" trim on each edge, which is inactive.

2. Pick a lead exit.

Mats are supplied with one 4-conductor cable. See the diagram above for options.

3. Pick a fail-safe interface controller, if required.

Choose a [PRSU](#) or [PSSU](#) model for high-risk applications.



SAFETY ZONE SENSING MATS

1. Specify the mat size.

Safety Zone Sensing Mats are available in sizes up to 40" x 60". Custom sizes are available.

2. Specify the mat surface.

Choices are: ribbed, eurodot, and smooth.

3. Pick a mat color.

Color choices are: Black or yellow. Custom colors are available.

4. Pick an edge treatment.

Choices are: ramped or square.

5. Pick aluminum edging (trim), if required.


For ramped mats, use [AE-1](#).

For square-edge mats, use [AE-2](#), [AE-3](#), or [AE-13](#).

6. Pick a fail-safe interface controller, if required.

Choose a [PRSU](#) or [PSSU](#) model for high-risk applications.

Note: Standard lead location is mid-point on short side. Other locations optional.

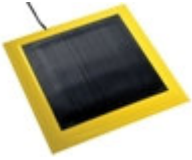

COMFORT ZONE SAFETY MATS

1. Specify the mat size.

Comfort Zone Safety Mats are available in sizes up to 40" x 60".

2. Pick a lead exit.

Mats are supplied with one 4-conductor cable. See the diagram above for options..

3. Pick a fail-safe interface controller, if required.

Choose a [PRSU](#) or [PSSU](#) model for high-risk applications.

Note: Mat has black sensing surface with ramped, yellow edge.